

21+ BT50 & DMAX FITTING INSTRUCTIONS



STEP ONE: Remove the Mud Flap



STEP TWO: Peel back the inner guard



STEP THREE: Mark out the inner guard and cut



STEP FOUR: Flatten body seam



STEP FIVE: Mark guard, 25mm



STEP SIX: Mark out guard, 30mm




STEP SEVEN: Trim guard



STEP EIGHT: Use a rust prevention spray on cut edges.



STEP NINE: Apply the provided pinch weld and cut to length

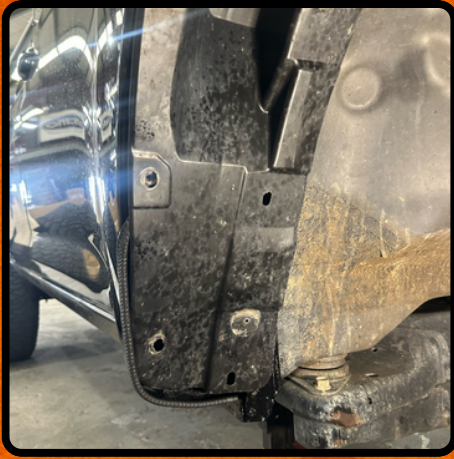

STEP NINE: Reinstall the inner guard



STEP TEN: Install the Mud Flaps. Use the longer screw for the outside hole.



JOB DONE!

